



DIREKT-TEK

DT101172A | 10" Tablet PC
USER GUIDE



NOTE: For Spanish users, go to "Settings", then go to "Language & Input" to change from English to Spanish Language OSD.

Please read this manual before operating your device and keep it for future reference.

Direkt-Tek's new 10.1" Tablet DT101172A is the next-generation tablet PC. It features a 10.1" High Resolution Screen (800x1280) and strong Quad Core Cortex A53 CPU processor providing access to the web for news, weather, or local business information. Download thousands of Apps from the Play Store to meet your needs, such as games, favorite movie clips, music, and videos. With built-in Bluetooth you can connect to any Bluetooth speaker system and earphone to listen to music, or connect to a Bluetooth keyboard for easy typing, send files to another tablet or mobile phone with Bluetooth function. Equipped with memory of 16GB, you may store plenty of pictures, movies, and documents. Expansion storage is available via Micro Card Reader slot, up to 128GB. The DT101172A is your all-in-one tablet that you can't live without.


Notes:

- This is a high-density electronic product; please do not dismantle it by yourself.
- Avoid the unit being dropped, shaken and hit.
- Avoid using this product in the following environments: High and low temperature, humidity, dusty, strong magnetic fields and long-term exposure to sunlight.
- Wipe the product shell by using dry wet cotton cloth gently; the use of other chemical cleaning is prohibited. This product should be kept away from water and liquids, so cups filled with liquids should not be placed near the product.
- To prevent hearing damage, never use headphones at excessive volume levels.
- Be very careful when wearing your headphones while walking on the street and do not use them when driving a car, motorcycle or bicycle, in order to avoid traffic accidents.
- Please use permitted battery, charger and accessories only, the use of any other type of product would be a breach of warranty regulations, and may be dangerous.
- Please deal with waste machinery and accessories according to local environmental regulations.
- If you have any questions in the process of using of the product. please contact the local dealer or contact Direkt-Tek customer service center directly.
- For any file loss caused by product damage, repair or other causes of product damage, Direkt-Tek shall not be responsible for it. Please follow the user's guide and backup your files frequently.

Content

1. Appearance and buttons.....	2
2. Start-up and shut-down	3
3. Desktop	3
4. Buttons	4
5. Main menu operation.....	5
System settings	5
*Time / Date setting	6
*Brightness	7
*Screen standby.....	8
*Wireless & network	8
*Install, unload, run the application.....	9
*Backup & reset.....	10
*Storage.....	11
*Language & keyboard	11
*ES file explorer.....	12
6. Network	13
7. Music playback.....	14
8. Video playback	15
9. Photo browse.....	16
10. Wallpaper	17
11. Record	18
12. Photograph.....	18
13. E-mail	19
14. External device.....	22
15. Features	23
16. Accessories	23

1. Appearance and buttons

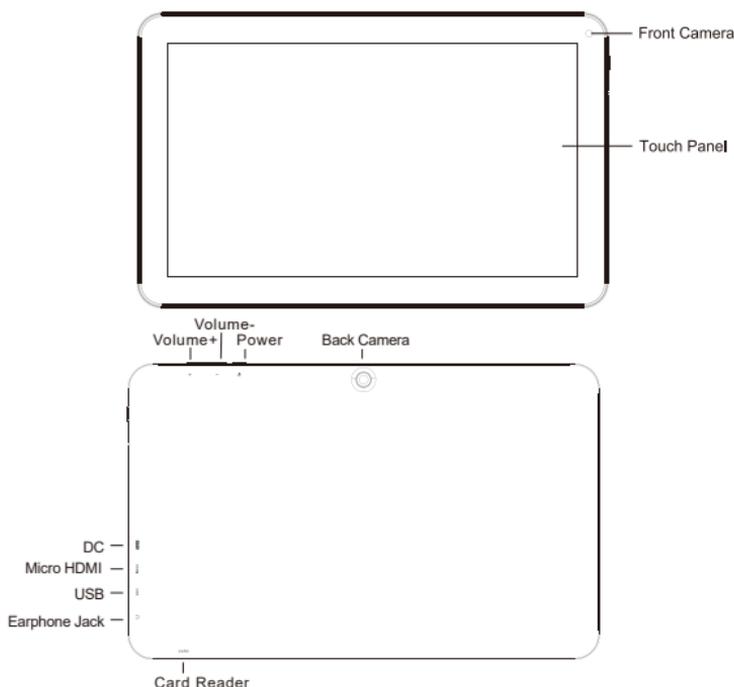

【Note】

To Power on: Press and hold the Power button, the system will enter the main interface.

To Power off: In the main menu interface, press the Power button for about 5 seconds to power off, the system will appear “Power off” option, click “ok” and you can safely power off. (See page 3).

Lock screen: Press Power button to lock screen or unlock screen.


Screenshot: Press Power button and Volume- buttons at the same time, and hold for 3 seconds.

When the power runs out, the system will power off automatically.

2. Start-up and shut-down

Startup: Press the power key and the system will enter the process of Start-up.

Shutdown: Press the power key then a pop-up with options will appear on the screen, choose the option of **Power off** as shown below.

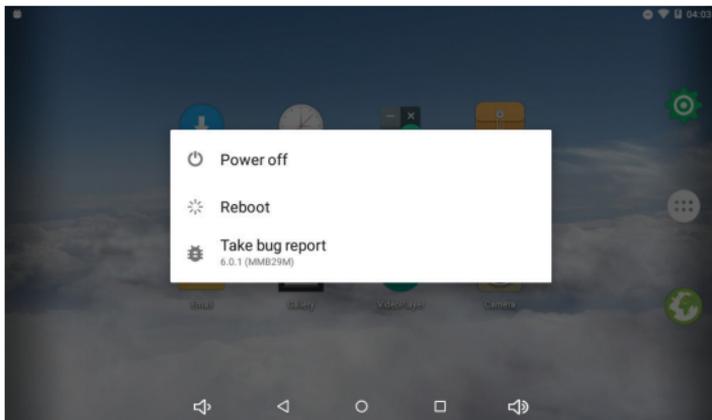

Click OK to shutdown

Sleep: In the normal state operation of the machine, press the power button, enter to **Sleep** mode, at this time the screen will be closed. Another short press on the power button will resume to normal mode. When the tablet is not in use you can start this function to reduce power consumption.

3. Desktop

After the normal startup of the system is completed, you can see the Android 7.0 desktop (below). The default desktop consists of quick search bar, status bar, and menu label icon.



The **status bar** is used to display the network status of current system, battery power, time and other information.

Quick search box is used by the typing keywords to do the Internet search.

The main menu tag is in the right middle side of the screen, click it and the default menu bar can be expanded.

4. Buttons

The volume keys: Volume+, Volume- in the taskbar can be used for Volume change.


The power button: Press long time for switching machine. Press quickly to enter or leave the state of dormancy.

Menu key: Return or select the main interface.

Return key: Return to the last interface .

5. Main menu operation


Press the main menu icon  on the start screen, the menu screen appears like the one below:

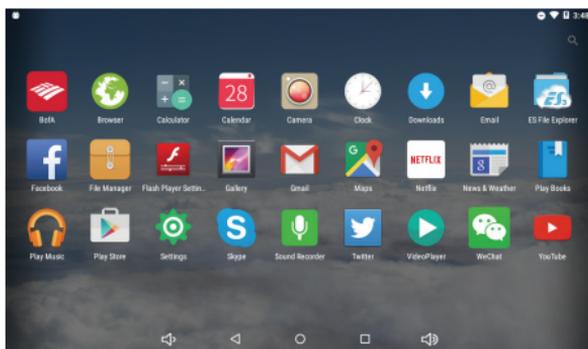

In the main menu screen, you can set the system, update/delete an existing application, install a new application, and start touch calibration, play music and video, browse webpage, play game and other operations.

System settings

Click the “Settings” icon  on the main menu screen, the system settings interface appears as shown below:

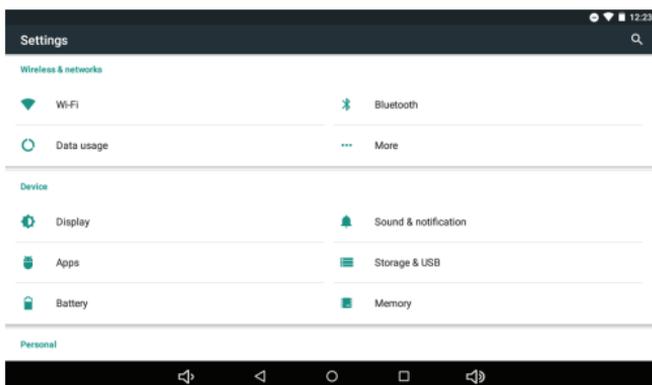

Select the items you want to access or change, for example:

* Wireless & network

* Date & Time

* Sound & Display

* The equipment and so on

Time/ Date setting

To Set the Date and Time


1. You can choose the **Automatic date & time** by using the network time.

or

2. Can select “**Set date**” to enter the date, and

3. Select “**Set time**” to enter the hour and minutes.


You also can choose to **Select time zone**, set time, select date format, set date and other information. For example, choose the set date, as shown below:

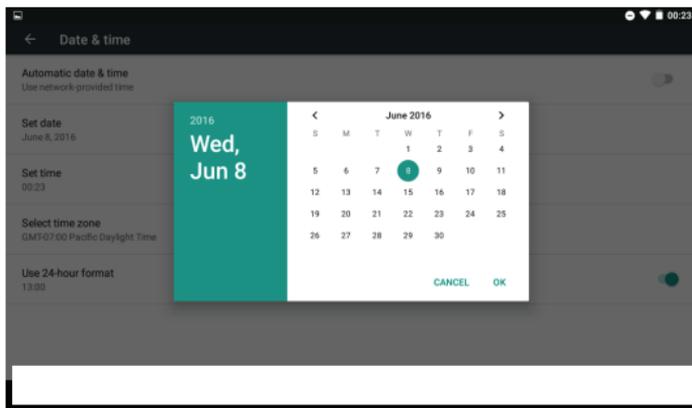

Choose+: It means increase of one unit;

Select-: It means it reduces one unit;

You can also choose the number to enter the input pattern. Directly input the number, and then select the Done button.

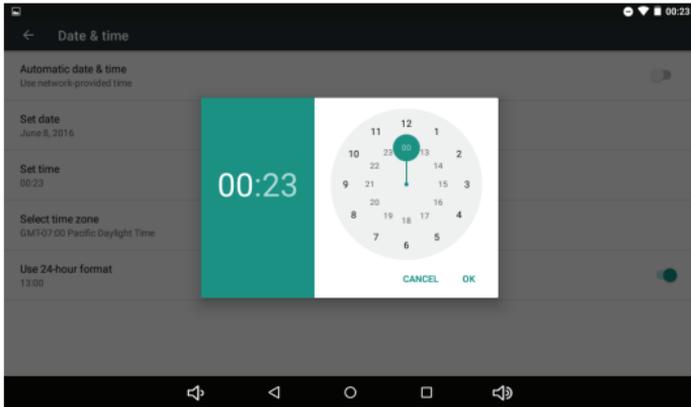

Select “Done”, if the input number is legitimate, then the operation is successful, and the system will use the new settings.

● Brightness

In the setting of the interface to select “display settings” into the display settings interface, roll drop-down lists to select “Brightness” as appeared in the following image.




● Screen standby

Screen standby: You can set the time for the screen standby function to occur. After it starts it will lock the screen the screen saver appears.

In the setting of the interface to select “display settings” into the display settings interface, roll drop-down lists to select ‘screen standby’ as appeared in the following interface.

Note: During video playback, the screen standby function is automatically inhibited.

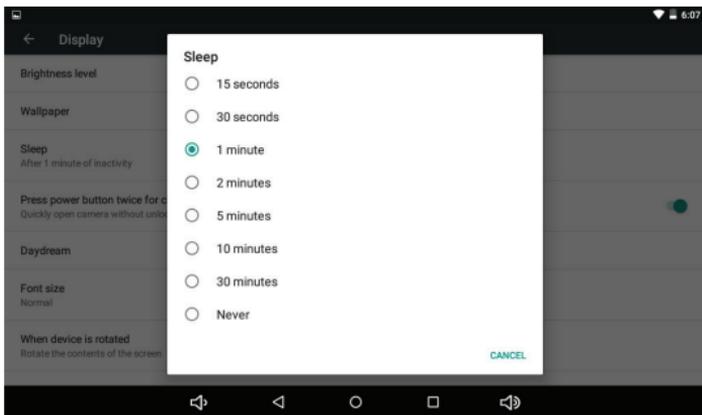

● Wireless & network

Click on the “Settings” icon in the main menu, click on the “wireless and network” into the “wireless and network” settings. Click on the “WIFI” column and WIFI function can be started at once. Click “WIFI settings” column can enter “WIFI setting interface”, as shown below:

In the “WIFI” interface (Pictured above), by click on the WIFI column you can open and close the WIFI function. Click “network notification” to list the wireless router that is searched by SupraPad. Click the searched wireless router and setup window will pop-up. Follow the prompts to complete the WIFI network links.



- **Install, unload, run the application**

Android installation: There are a variety of ways to install applications, for example, you can click on the Apk file directly and it will automatically be installed. In case that it is the third party programs installation the system may identify it as unsafe and will need the following procedures for installation.

Enter "Settings">"Security", select "Unknown sources", then "OK".



How to uninstall an App

1. Enter  “setting” > “Application” > “Manage application” And then there will be installed the program list.
2. Click you want to uninstall icons.
3. Click Uninstall, to delete the application.

● Backup & reset

Click on the “Settings” icon in the main menu, click on the “Backup & reset”.



● Storage

Click on the “Settings”  icon in the main menu, click on the “Backup & reset”.



【Remark】 : Tap option "delete SD card", so SD card can safely be removed.

● Language & keyboard

Setting: Language, text input and automatic error correction options;

Select Language: 54 languages are available.

Remark: Android system can support 54 kind of language, now many interface just support 14 language.

Android keyboard: Android keyboard setting

Sound on Key-press


Auto-capitalisation

Show suggestions: Display suggested words while typing


Auto-complete: Spacebar and punctuation automatically insert highlight.

● ES file explorer


In the main menu interface, you can manage your files and install APK software with “ ES File Explorer ”. Tap the “ES File Explorer”, you can choose the directory from SD Card, Internal Memory, or USB disk.

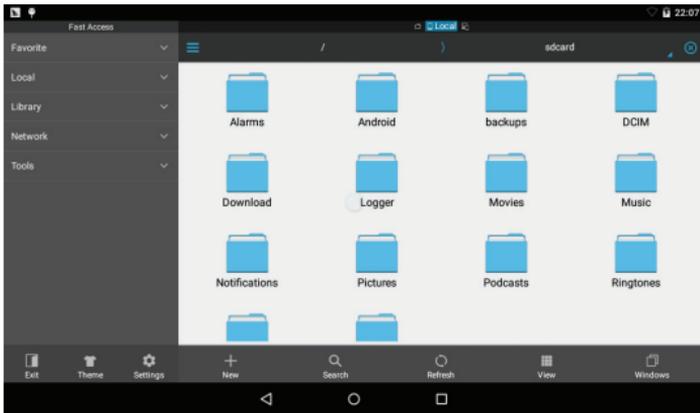

If you want to install application, open the directory APK via ES File Explorer.

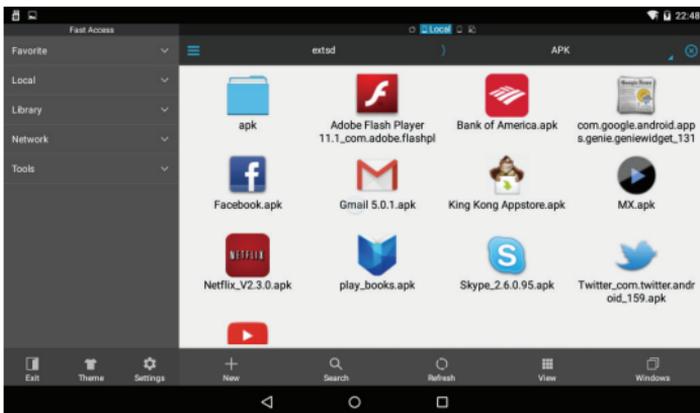

Install the searched application:

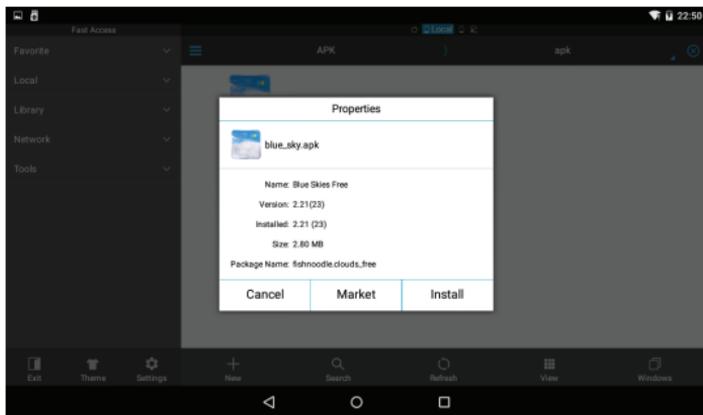

The user can do on-line installation through “market”, or download and install by the computer, or through a built-in browser download and install online.


*Uninstall the application: You can use the third party software management tools or use the built-in Android application management software.

Select “Settings” / “application” / “management application”, and select the corresponding installed applications to check the program.

6. Network


Webpage browsing:

When the network is connected. open the webpage browser and enter the URL, you can browse.

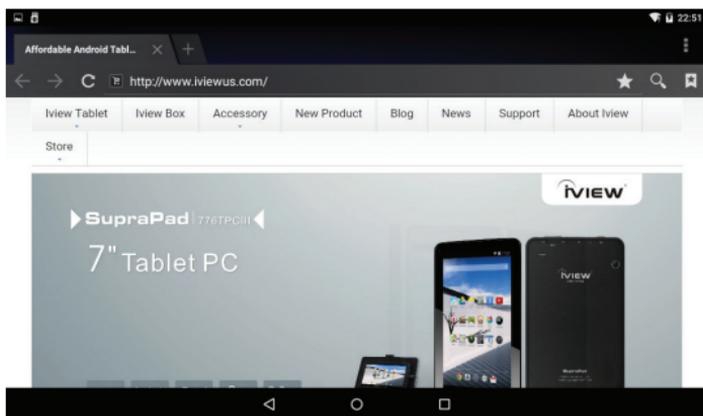

7. Music playback

Click on the “Play Music” icon in the main menu, and then enter the music player interface. The default list system in the user data area for all audio files is shown as below:

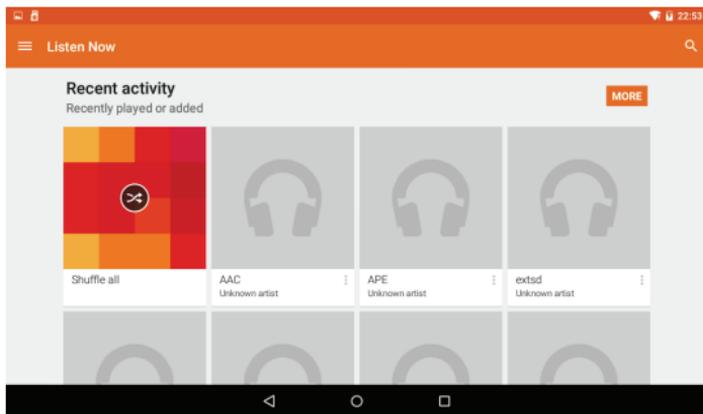


You can use synchronous USB to input audio file, or by inserting a Micro SD card with audio file to input audio files. You can also use the network to download the audio file.

Select the corresponding tag, and check the interface as “artists”, “album”, and “song” and so on to play the song.

8. Video playback

Click on the “Video Player” in the main menu, to enter the “Video Player” main interface. It lists all video files and image files as shown below:

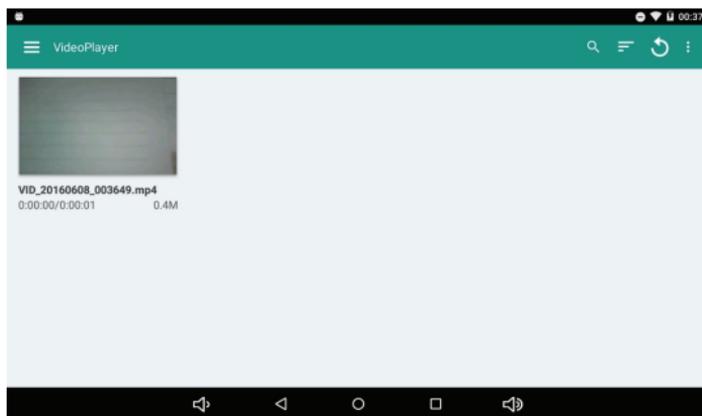

Select the video file and enter the video playing interface, as shown below.

Select “play”, “stop”, “fast forward”, “rewind”, “progress” and other control keys to control the playback schedule.


Online video:

Users can use the "market" or other ways to download online video player software, online TV player software, online music software, and then install in the machine. To open the installed software, you can watch online video or online TV, and listen to online radio.

Users can also download other third party network application software, including the webpage browsing, video player, website client, instant messaging and other software.

9. Photo browse

Click on the main menu "Gallery" to enter the "Gallery" interface. It lists all the picture files and video files as shown below:

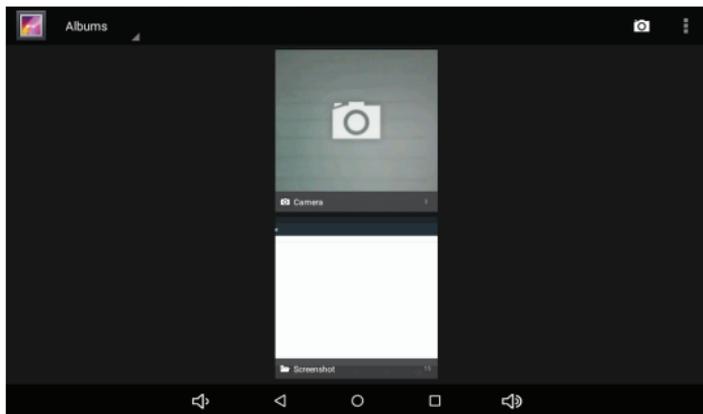


Select a picture file, enter the picture play interface. Select "zoom", "narrow" "set" and "delete" operation.


10. Wallpaper

The system supports static wallpaper, and 3D wallpaper.

In the desktop interface, press down the Menu key for pop-up menu options, select "wallpaper" and "choose the wallpaper source" selection box:

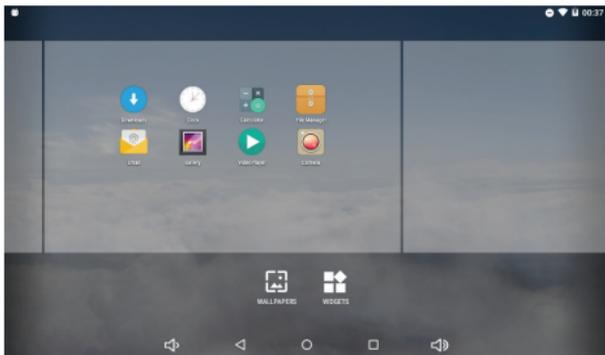

Or press on the screen and dialog box for the following to pop:

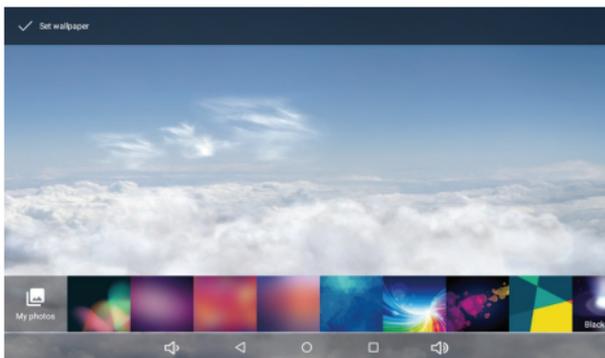

Into the above dialog box, click on the "wallpaper" set;

The following options will display:


Select "wallpaper" to customize wallpaper.

Select the "dynamic wallpaper" to use the system-supplied 3D wallpaper.

Select the "Gallery" to choose a picture supplied by the system as the static wallpaper.

11. Record


Click on the "sound recorder" icon in the main menu and enter the "sound recorder" main interface as shown below:

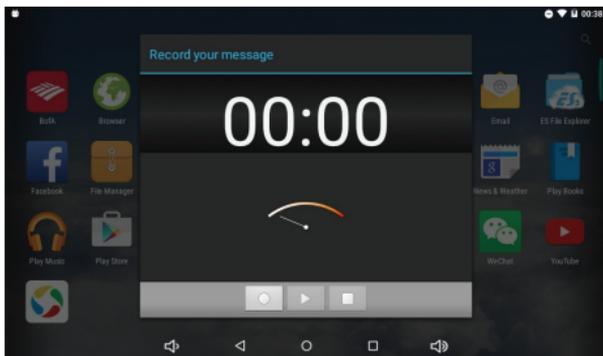


Select the "recording" button to record and after recording is completed press "stop" button. At this time you can select the "play" button to play the recorded sound. Select "Use this recording" button to save the recording, so that you can find the corresponding audio files in "NAND"; if you do not need to save, you can select the "give up" button.

12. Photograph

Click on the "camera" icon in the main menu and enter the "camera" main interface as shown below:

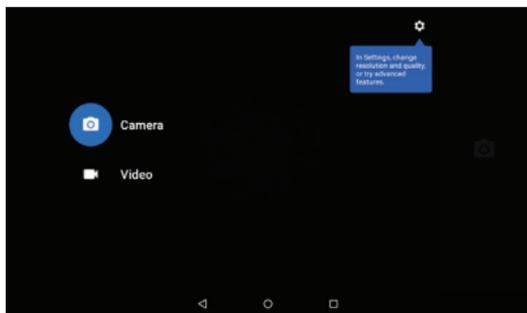


Click on shutter in the camera

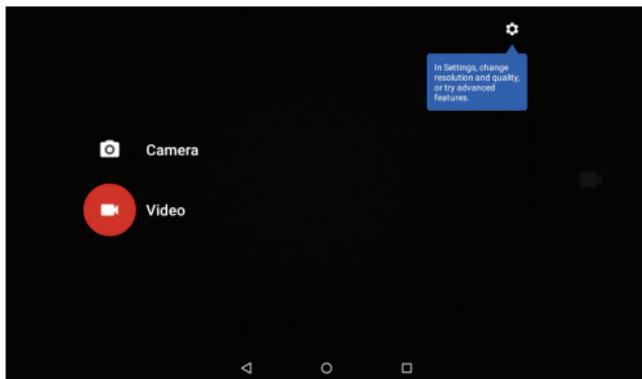

13. E-mail


Click on the "e-mail" icon in the main menu to enter email client. Allocation of account information will be required the first time. As shown below:

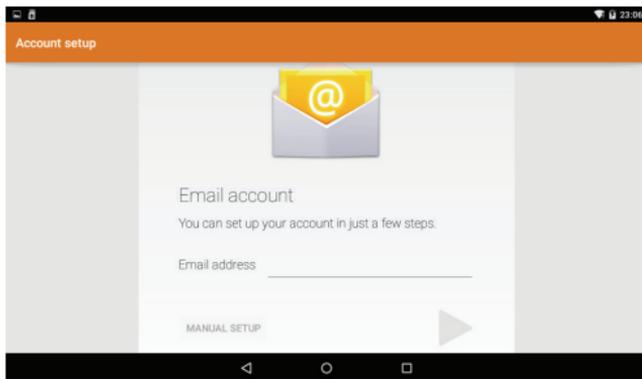


Email requires network support. Make sure that network link is normal. Here we take whhpwjh@126.com as an example:

In the email address bar, enter your valid email address: whhpwjh@126.com
In the email address bar, enter your valid password :*****

Then you can choose the "next", account type selection interface will appear as shown below:

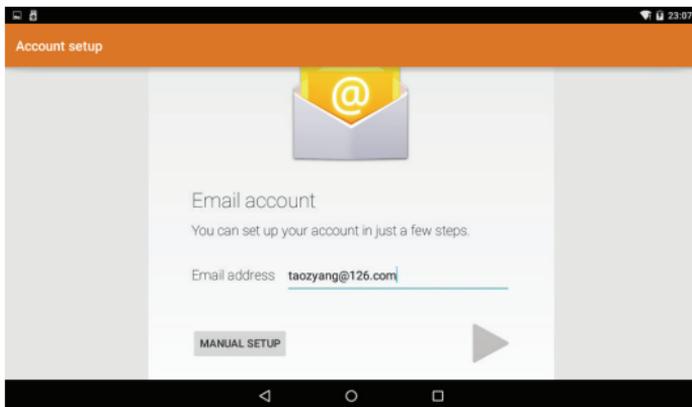

Choose POP3 account. And the receiving service settings will appear as shown below:

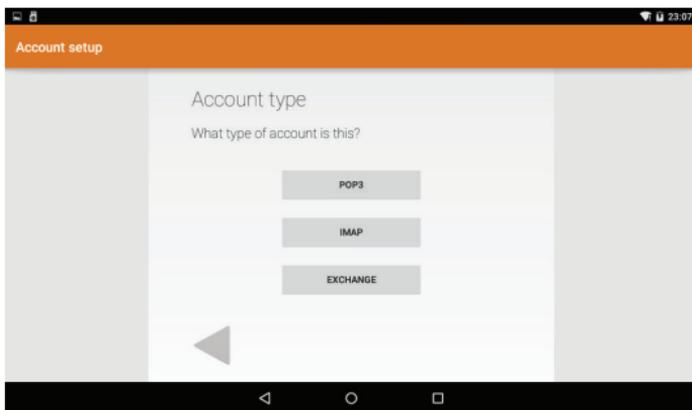


Please according to each email provider's information to set different parameter, such as:

The POP3 server: Default is "126.com", and should be modified as "pop.126.com"

The port number is "110"

Then select the "next", you will enter the "inspection acceptance server settings", if set up correctly, there will be a "foreign server settings" interface as follows:

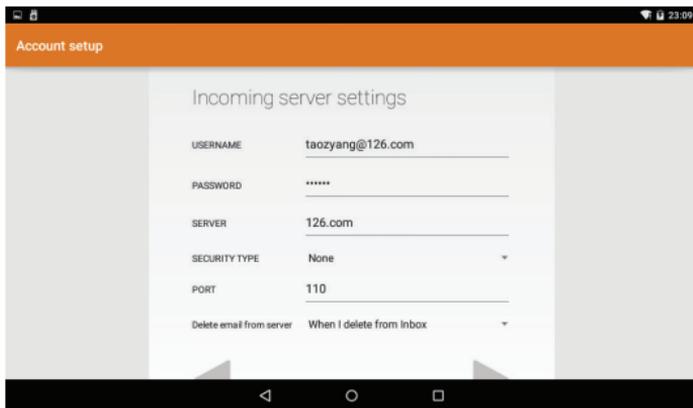

In the column"name", input the name you want to display in the outgoing message, and then click "finish" button, you can enter the mail interface. It will load the mail automatically;

Select one of the column to be viewed in the message. You can do "Reply", "delete", "more reply"; and other operations at the view bar.

14. External device

USB Connection

Using USB to connect the SupraPad and PC, the default connection mode is a synchronous mode.

You can drag the status bar to drop, appeared as the following interface:

Click  into the USB connection hints.

"USB connected": It means that the external memory(SD) loading is completed, and you can see the corresponding letter in the PC terminal.

OTG use

SupraPad supports FAT32 format mobile devices such as U disk and mobile hard disk.

The plug-and-play connection method:

Use the OTG wire to connect the Tablet PC USB OTG and the external equipment .

Keyboard and mouse

SupraPad supports plug and play USB mouse and keyboard device.

15. Features

- * Screen: 10.1" Capacitive Touch Screen, 800 x 1280 IPS High Resolution
- * Processor: Quad Core, Cortex A53, 1.2GHz
- * OS: Android 7.0 Nougat
- * RAM: 1GB
- * Memory: 16GB
- * Wireless connection: WIFI 802.11 b/g/n
- * Build in Bluetooth 4.0
- * Support Dual Camera : Front 0.3MP, Rear 2.0MP
- * Support Skype Video Call
- * Support 1080P full HD video
- * I/O Port : Micro USB
- * Card Slot: Micro SD Card (Max: 128GB)
- * Micro HDMI Port
- * Audio Output: Stereo Speaker (8Ω 1.0w)/3.5MM Stereo Headphone Jack
- * Play Store, Internet Browser, Calendar, Calculator, E-mail
- * Picture Viewing, Music / Video Playback, Games
- * Supports Multi Languages
- * Battery: Built in 6000 mAh / 3.7V Li-ion, rechargeable
- * Power Source: 5V=2A

16. Accessories

Below items are included in your tablet package:

- * SupraPad Complete Device
- * Power Adapter
- * OTG Cable
- * USB Cable
- * Earphone
- * User Manual
- * Stylus Pen
- * Carrying Sleeve
- * Cleaning Cloth

***Por favor lea y revise su guía o manual
de usuario atentamente antes de
Usar este producto.***

*Información sobre resolución de problemas adicional
puede también encontrarse en la web:*

***www.Direkt-Tek.com y hacer clic en "Contact"
o envíenos un email a customerservice@direkt-tek.com***



DIREKT-TEK 

DT101172A 10" Tablet PC